


FRONT LEG - REAR LEG

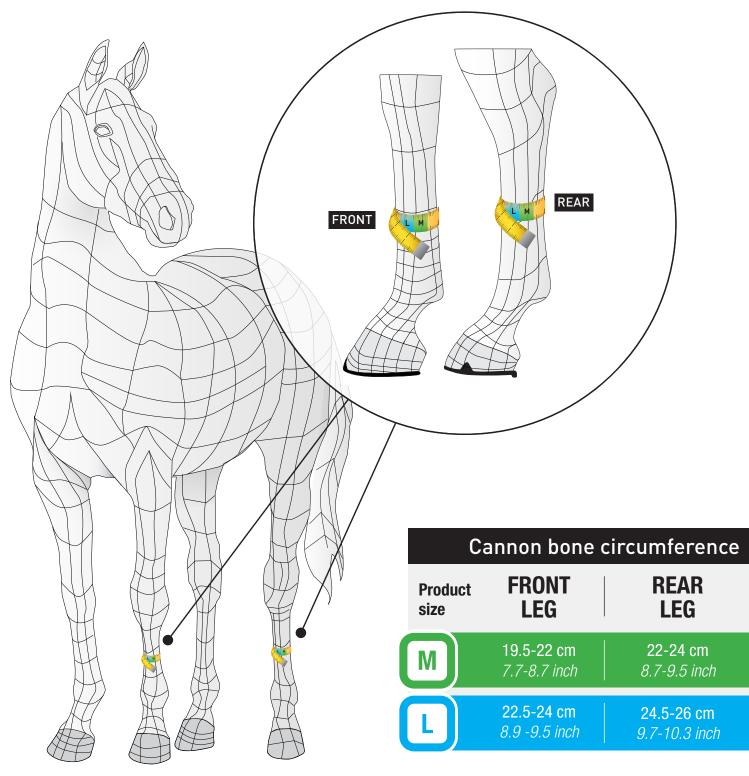

www.veredus.com





ABSOLUTE DRESSAGE (AD)

OVERLAPPING GUIDE





AD size too small

AD size correct overlapping

AD size too big. Excessive overlapping





ABSOLUTE DRESSAGE

FITTING GUIDE





NOT CORRECT

CORRECT





ABSOLUTE DRESSAGE

NINE SIMPLE STEPS TO POSITION ABSOLUTE



PHASE 1: PLACE THE PROTECTION



Grab the boot with the right hand, if you are on the left side of the horse, or with the left if you are on the right.



Keep it halfway and place it on the cannon bone.



Raise it until the fetlock itself blocks it.

PHASE 2: HOOK THE STRAPS



First, take the <u>lower</u> <u>strap</u> and pull it forward and towards vou.



Hook it up, taking care that the lining overlaps correctly.



Repeat the same thing with the <u>upper strap</u>.

PHASE 3: CHECK THE DETAILS



Check that the <u>upper</u> <u>edges</u> are well aligned.



Check that the lining is <u>properly</u> <u>overlapped</u>.



Check that the protection <u>adheres</u> to the fetlock.